

LINX-153 / LROC-102

Automation Server / Room Controller

Installation instructions

Instructions de montage


Istruzioni di montaggio


Montageanweisung

Instrucciones de montaje

Montagevoorschrift

Monteringsanvisning

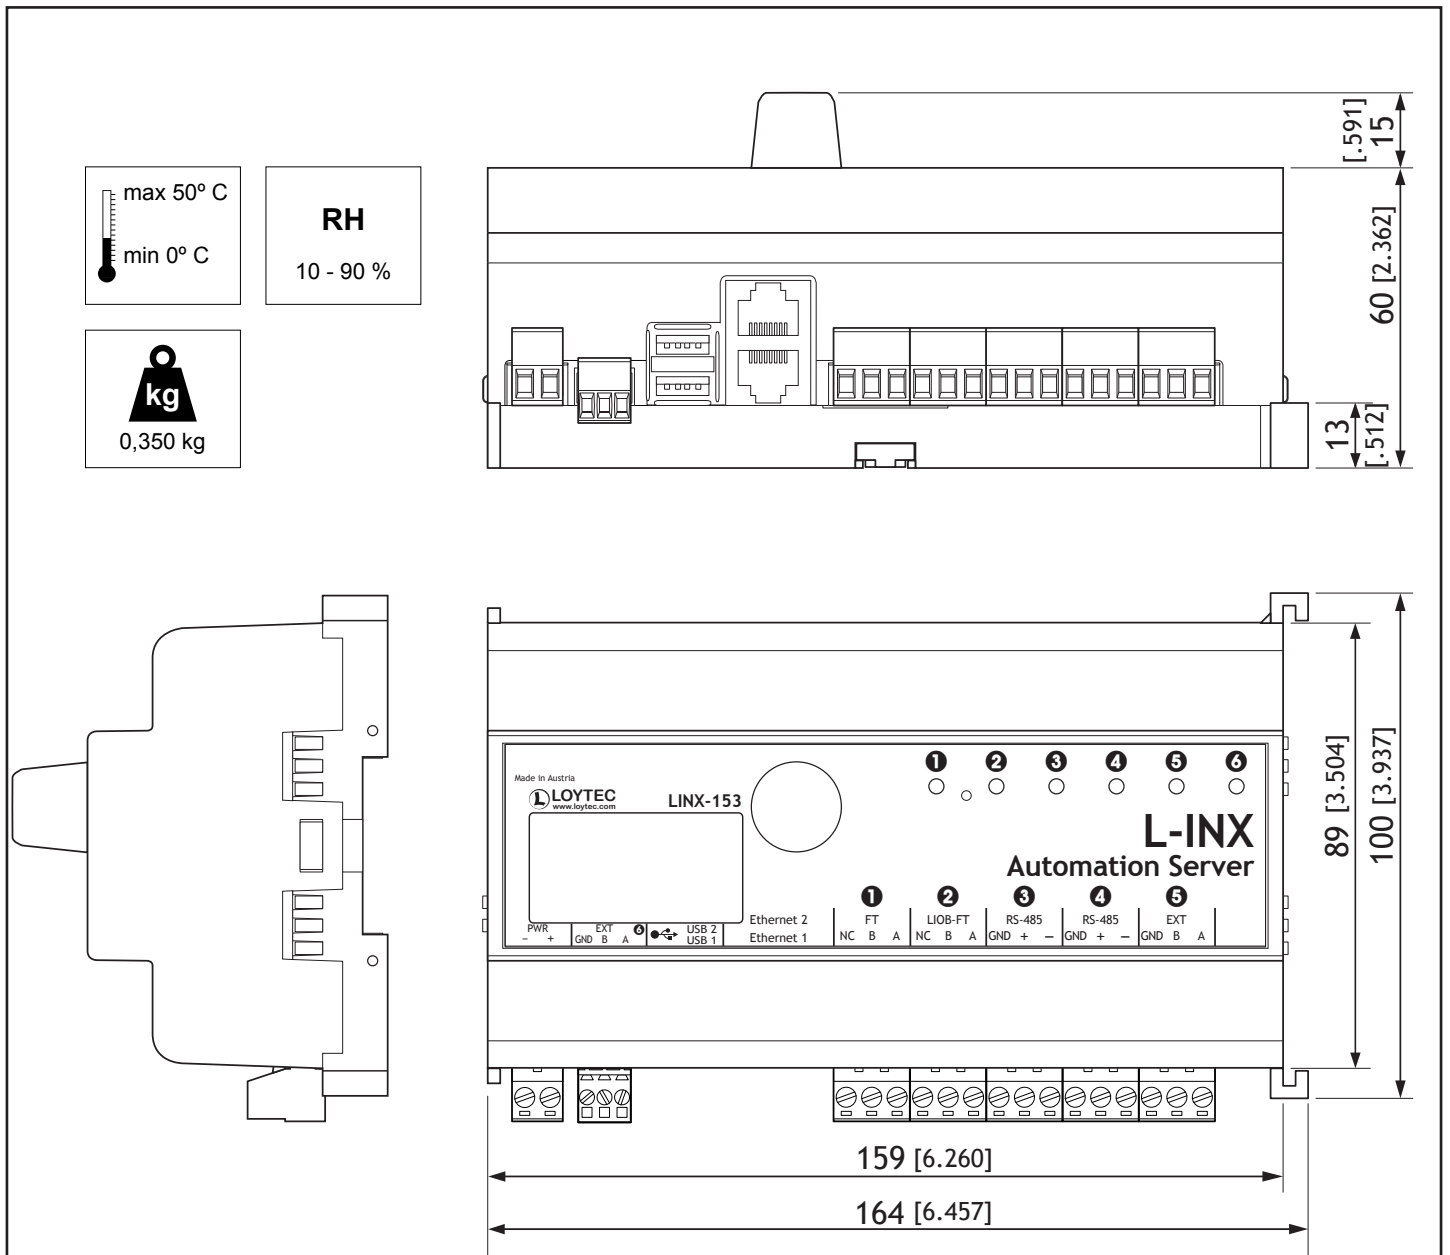


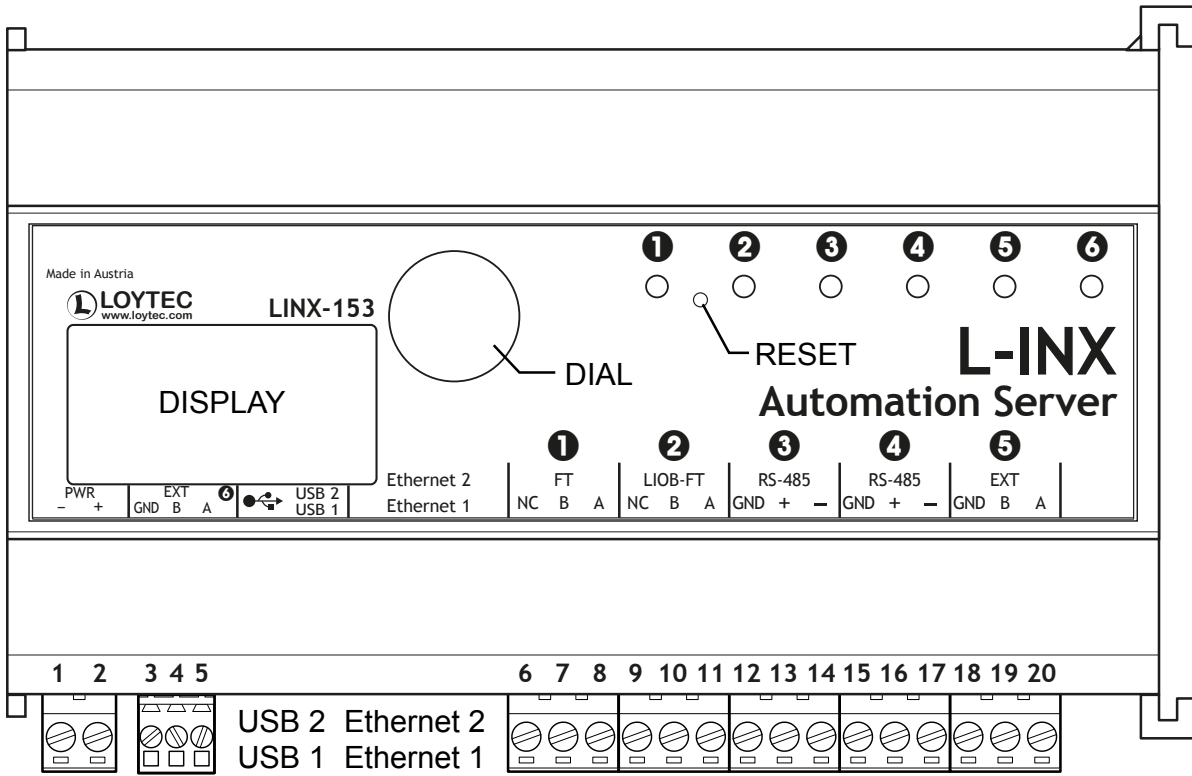


Connectors		
POWER	1	Power supply input -
	2	Power supply input +
Input + must NOT be connected to EARTH GND		
EXT PORT 6	3	GND
	4	B
	5	A
CEA-709 TP/FT-10 PORT 1	6	NC
	7	B
	8	A
LIOB-FT PORT 2	9	NC
	10	B
	11	A
RS-485 PORT 3	12	GND
	13	+
	14	-
	15	GND
RS-485 PORT 4	16	+
	17	-
	18	GND
EXT PORT 5	19	B
	20	A



Connectors		
USB1	USB-A	USB Device
USB2	USB-A	USB Device
Ethernet1	RJ45	10/100Base-T
Ethernet2	RJ45	10/100Base-T
Buttons		
RESET	Reset	
DIAL	Turn-and-Push Dial	

4.5 lb-in/0.5 Nm

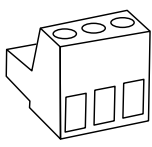


Weidmüller
 BLZP 5.08/03/180
 BLZP 5.08/02/180
 BL 3.50/03/180 SN OR BX

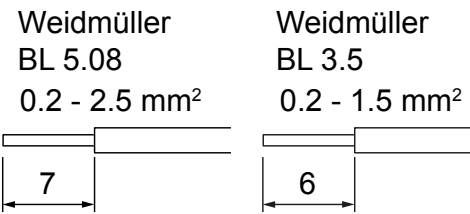

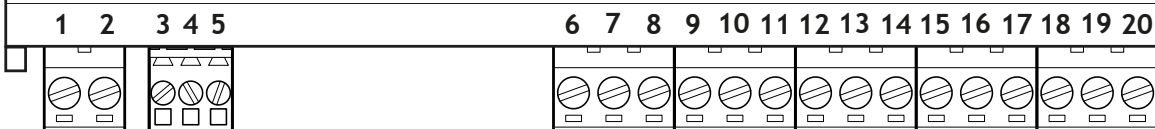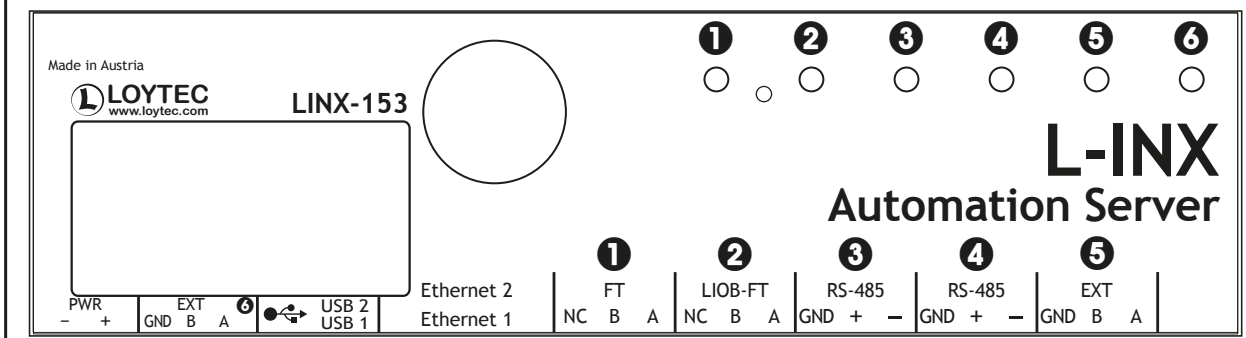

STATUS LEDs		
FT	GREEN flashing fast GREEN flashing 1 Hz RED permanent RED flashing fast	Traffic on CEA-709 port Not commissioned CEA-709 port damaged CEA-709 traffic overload
LIOB-FT	GREEN flashing RED permanent RED flashing fast	Traffic on LIOB-FT port LIOB-FT port damaged LIOB-FT traffic overload
RS-485	GREEN flashing RED flashing	Modbus traffic Transmission errors
MODBUS	GREEN flashing fast ORANGE flicker RED permanent RED flashing fast	Token ok, traffic Single master, traffic Token lost, cable damage Communication errors
MS/TP		
EXT	GREEN GREEN flashing RED permanent RED flashing fast	M-Bus/KNX link M-Bus/KNX activity M-Bus/KNX port damaged M-Bus/KNX traffic overload


Install the cover

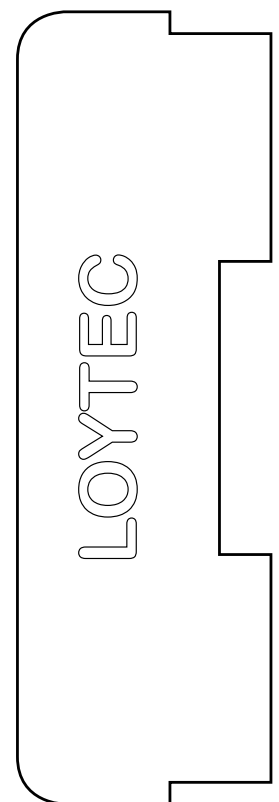

Please update the firmware of the device first,
see www.loytec.com

DHCP enabled
User: admin
Password: loytec4u

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

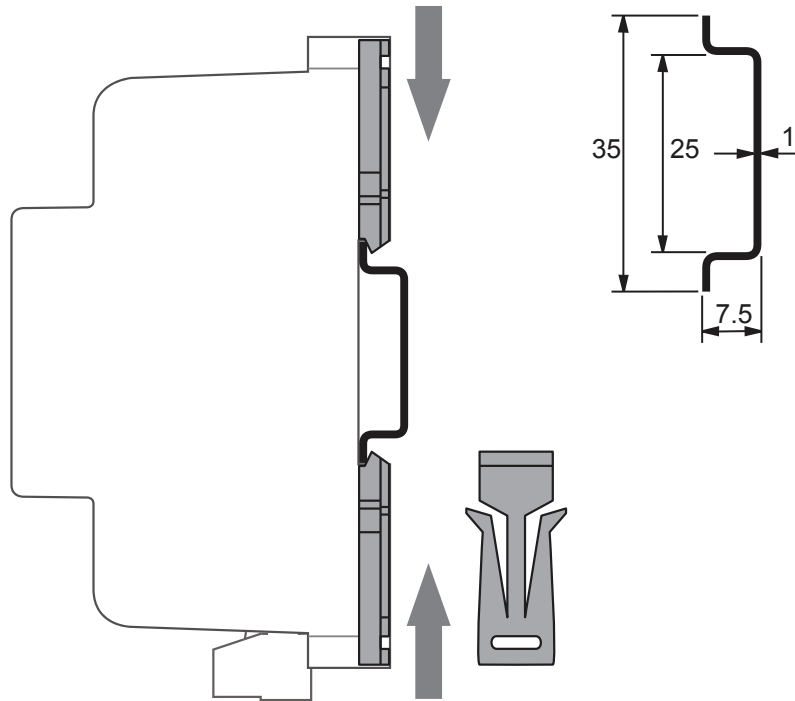

Node ID of CEA-709 Port 1

Virtual (Node) ID of CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

