

LROC-400, LROC-401, LROC-402 Room Controller

Installation instructions

Instructions de montage


Istruzioni di montaggio


Montageanweisung

Instrucciones de montaje

Montagevoorschrift

Monteringsanvisning

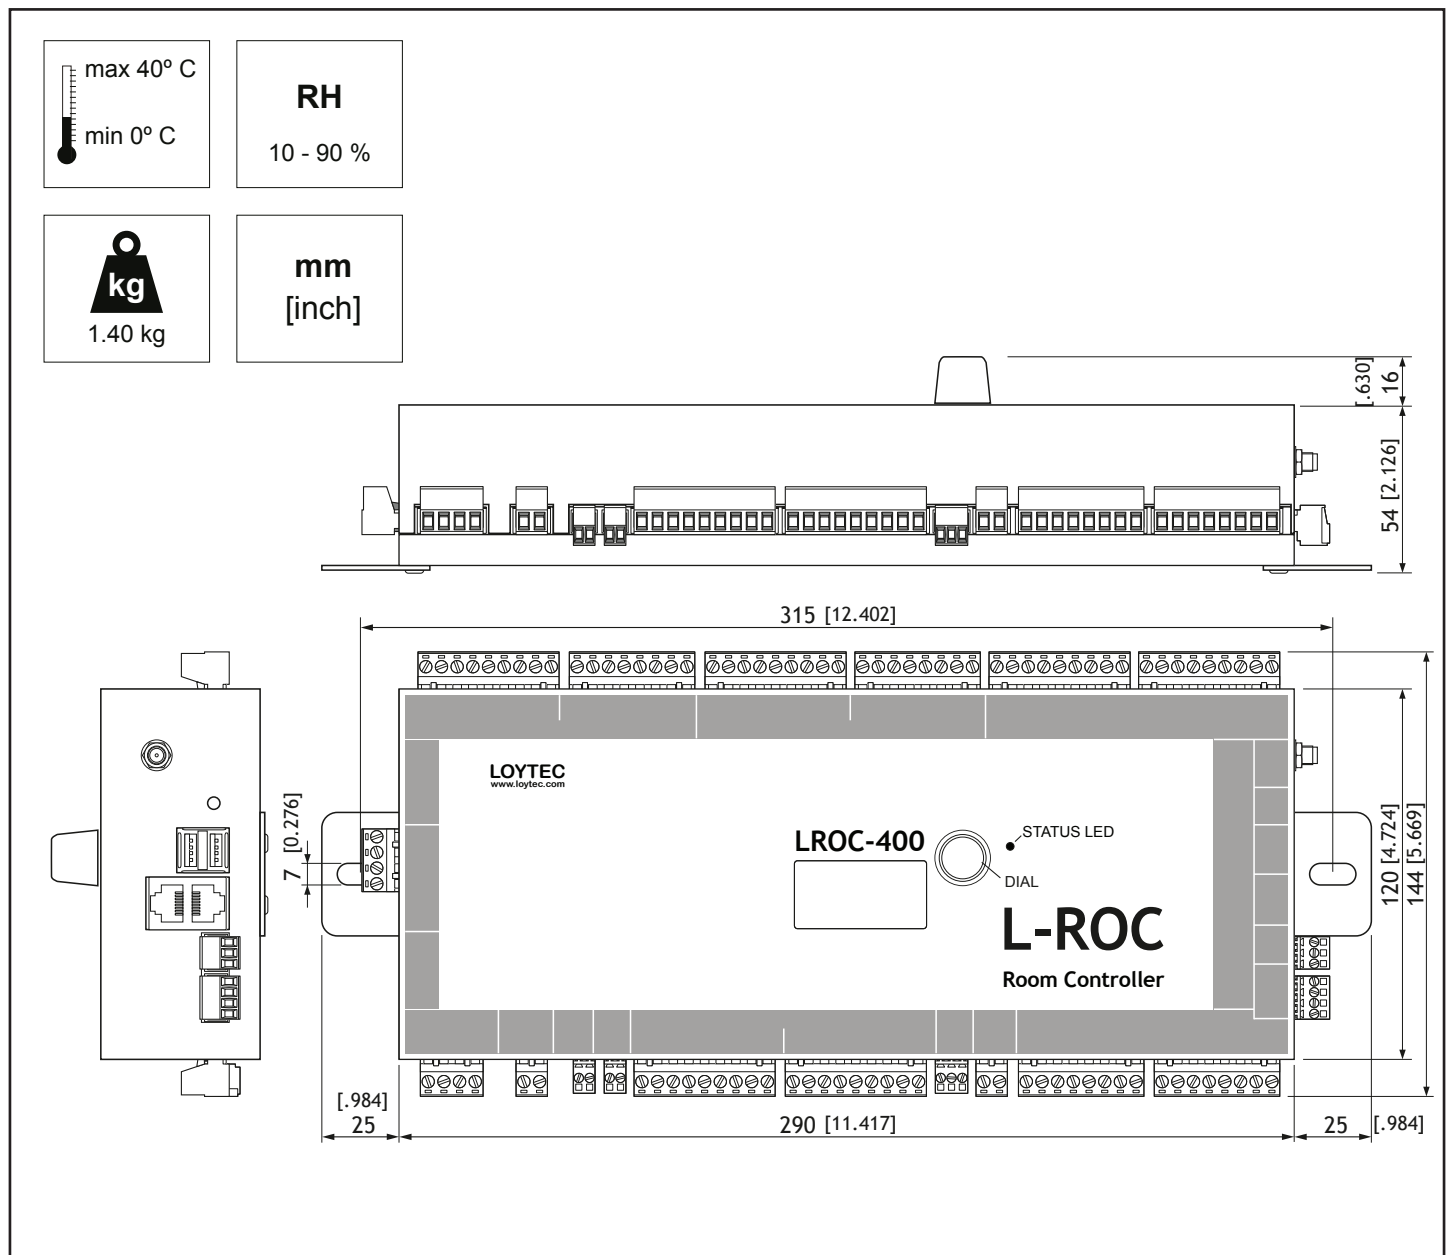

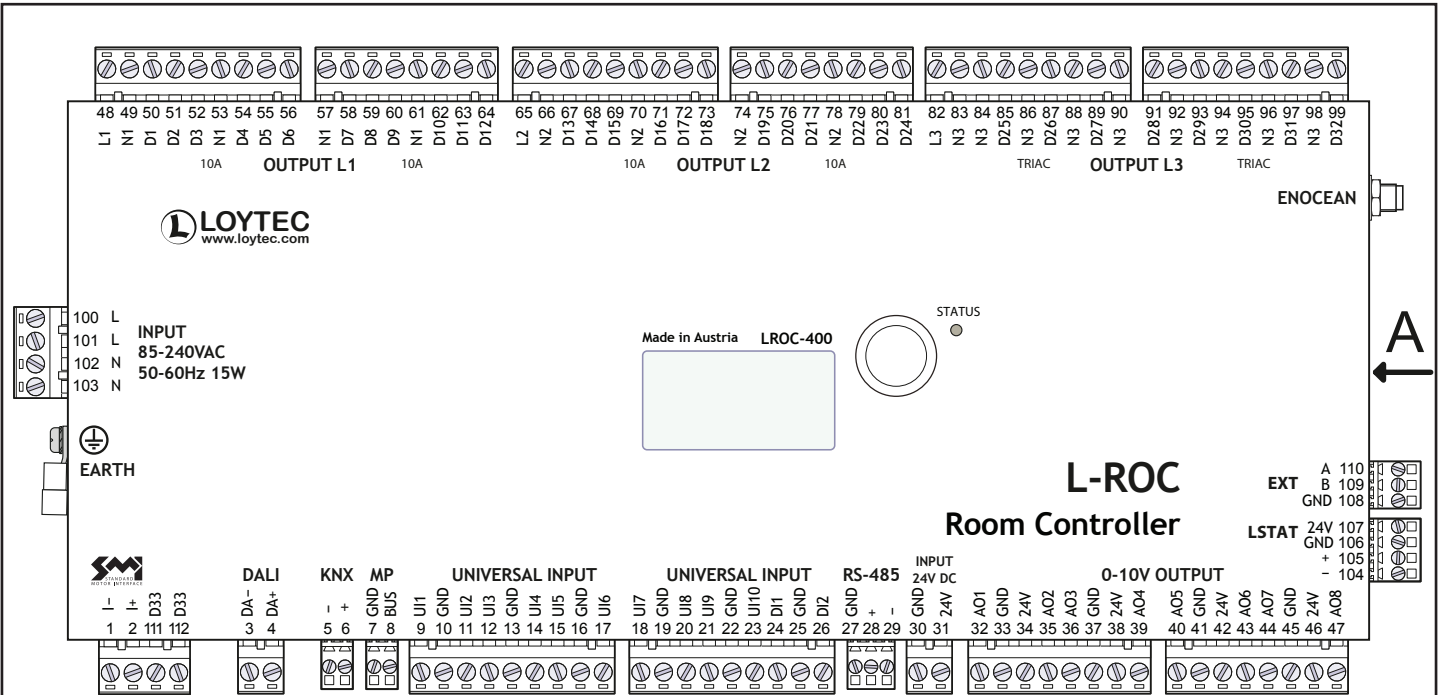


Connectors LROC-400, LROC-401		
SMI (Standard Motor Interface)	1, 2, 111, 112	- + D33 D33
DALI	3, 4	DA- DA+
Connectors LROC-40x		
KNX TP	5, 6	Input - Input +
MP-Bus	7, 8	GND BUS
Connectors LROC-400, LROC-402		
Universal Input (UI)	9-23	Input UI1-10 GND Input UI2-10 GND Input UI3-10 GND Input UI4-10 GND Input UI5-10 GND Input UI6-10 GND Input UI7-10 GND Input UI8-10 GND Input UI9-10 GND Input UI10-10
Digital Input (DI)	24-26	Input DI1 GND Input DI2
Connectors LROC-400, LROC-401		
RS-485 Modbus MS/TP	27-29	GND + -
Connectors LROC-40x		
Power Input 24 V DC	30, 31	GND Input 24 V DC

Connectors LROC-400, LROC-402		
Analog Output (AO) 0-10 V	32-47	Output AO1 GND Output 24 V Output AO2 Output AO3 GND Output 24 V Output AO4 Output AO5 GND Output 24 V Output AO6 Output AO7 GND Output 24 V Output AO8
Digital Output L1 (D1 - D12) Relais 10 A	48-64	Input L1 Input N1 Output D1 Output D2 Output D3 Output N1 Output D7 Output D8 Output D9 Output N1 Output D10 Output D11 Output D12
Digital Output L2 (D13 - D24) Relais 10 A	65-81	Input L2 Input N2 Output D13 Output D14 Output D15 Output N2 Output D16 Output D17 Output D18 Output N2 Output D19 Output D20 Output D21 Output N2 Output D22 Output D23 Output D24


Connectors LROC-400, LROC-402		
Digital Output L3 (D25 - D32) TRIAC 0.5A 24-240 VAC 50 / 60 Hz	82-99	Input L3 Input N3 Input N3 Output D25 Output N3 Output D26 Output N3 Output D27 Output N3 Output D28 Output N3 Output D29 Output N3 Output D30 Output N3 Output D31 Output N3 Output D32
Connectors LROC-40x		
Power Input 85-240 VAC 50-60Hz	100-103	Input L Input L Input N Input N
L-STAT	104-107	- + GND Output 24 V
Connectors LROC-400, LROC-401		
EXT	108-110	GND B A

STATUS LED	
OFF	No Power / Booting
GREEN	Normal Operation
ORANGE	Manual Mode
RED	Error

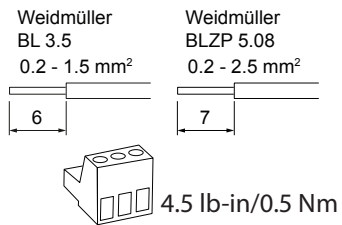


- 2 poles: Weidmüller BL 3.50/02/180 SN OR BX
- 2 poles: Weidmüller BLZP 5.08/02/180
- 3 poles: Weidmüller BL 3.50/03/180 SN OR BX
- 4 poles: Weidmüller BL 3.50/04/180 SN OR BX
- 4 poles: Weidmüller BLZP 5.08/04/180
- 8 poles: Weidmüller BLZP 5.08/08/180
- 9 poles: Weidmüller BLZP 5.08/09/180


A:

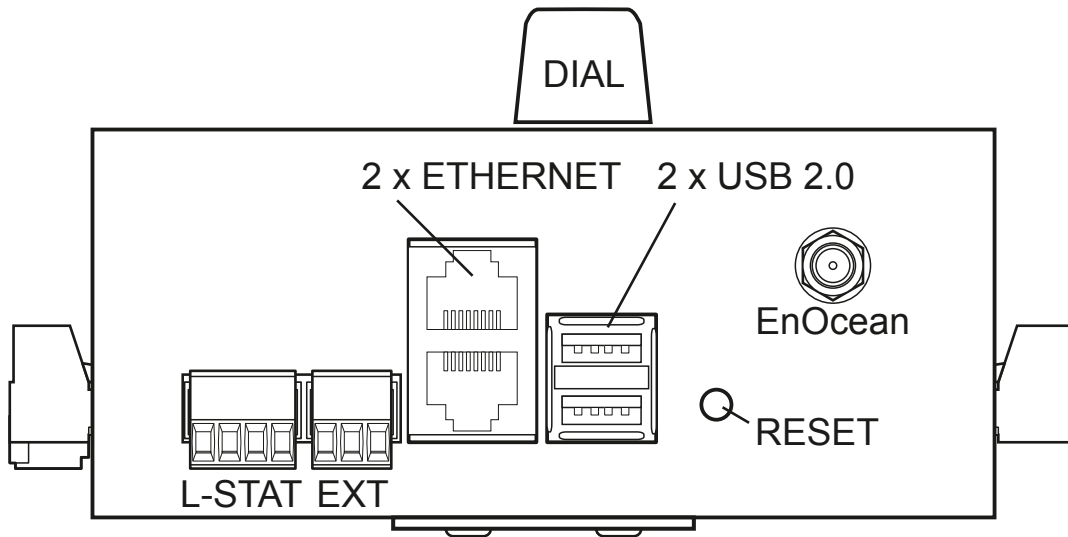

Buttons	
RESET	Reset Button
DIAL	Turn-and-Push Dial

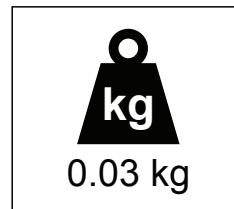

EnOcean Antenna
868 / 902 / 928 MHz
Order Number: 61007301

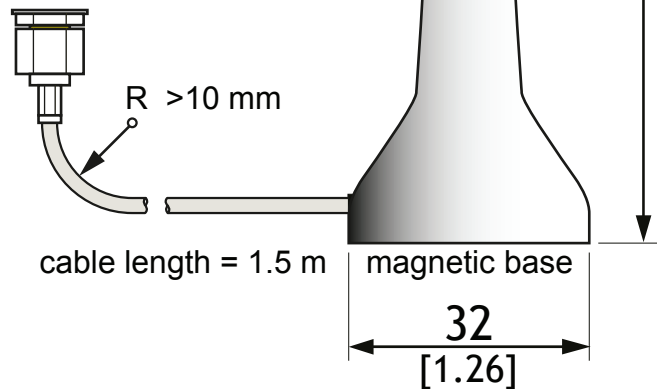

DHCP enabled
User: admin
Password: loytec4u

Please update the firmware of the device first,
see www.loytec.com



It is not allowed to mix SMI and SMI-LoVo drives on SMI interface.

If SMI-LoVo drives are installed please cut this label and attach it over the SMI logo on the L-ROC device.



Date Code

LOYTEC electronics GmbH

LROC-400



W43/2015

MADE IN AUSTRIA

SER#



029302-000AB004D687

Serial number of the device

label 1.3